


The ESS, Inc.
HME 2000
Frequency Settings Manual



A Step-by-Step Illustrated Guide

© 2007 ESS, Inc.



This document will demonstrate how to set the frequencies of the HME 2000 Order Taker.

Introduction

If you take advantage of the ESS Advance Replacement Program and need to incorporate a replacement Order Taker into your existing system you may need to make adjustments to the new Order Taker to match its operating frequency and tone settings to those of your HME wireless system.


Tools Needed:


Paperclip or small screwdriver

Locating the DIP Switches


Open the battery compartment of the new Order Taker and of a working Order Taker and remove their batteries.

The DIP Switches are located just inside the battery compartment. They will be small white tabs in a black plastic housing. You should see a row of 4 switches with another row of 8 below it.

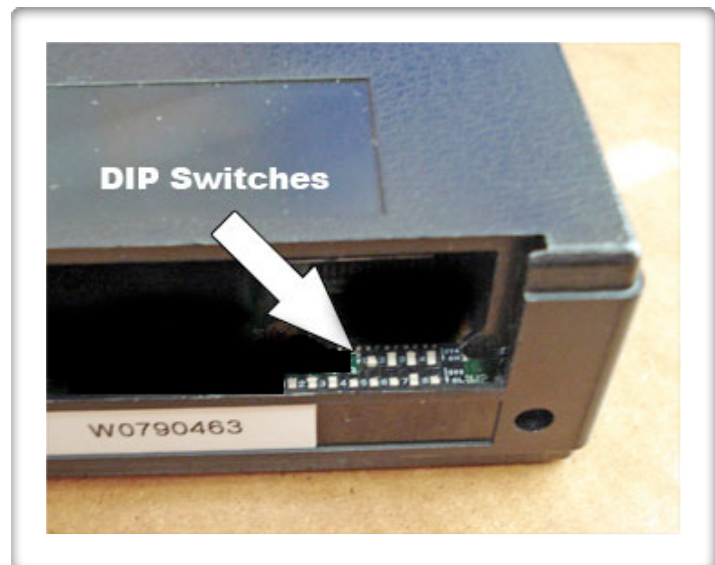


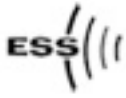

DIP Switch Basics 101

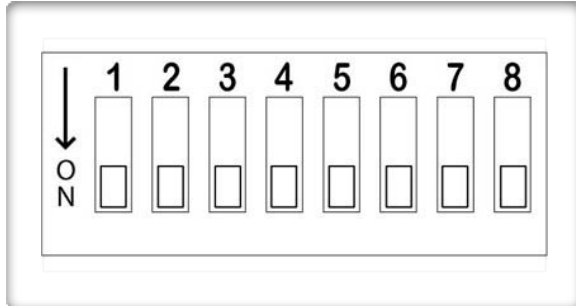

This is a 8-position DIP switch, the individual switches slide Up for "OFF" or remain Down for "ON". A small screwdriver or paperclip should be used to slide them.

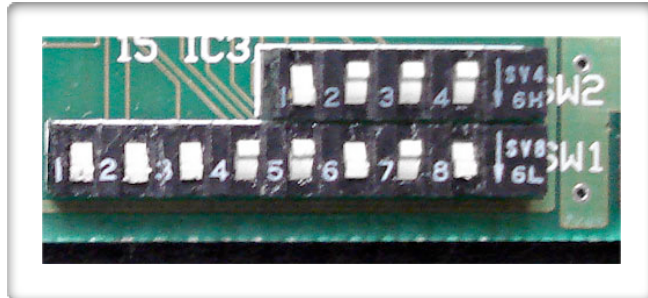

This is a close-up of the DIP Switches in your HME 2000 Order Taker.


Setting the Switches

Compare the DIP switch settings of the new Order Taker and of the working Order Taker

If they are different, change the DIP switch settings of the new unit to match the settings of the working unit.

Be certain the switches are adjusted fully to the ON or OFF position.



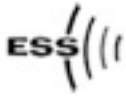


Test the Unit

While standing in front of the base station push the “A” button on the Order Taker and check to ensure that the “A” indicator on the base station illuminates.

Repeat for the “B” button.

If both “A” and “B” light you have successfully set your frequencies!

If either “A” or “B” fails to light go back and check that the DIP Switches are set exactly like the ones on the working unit.

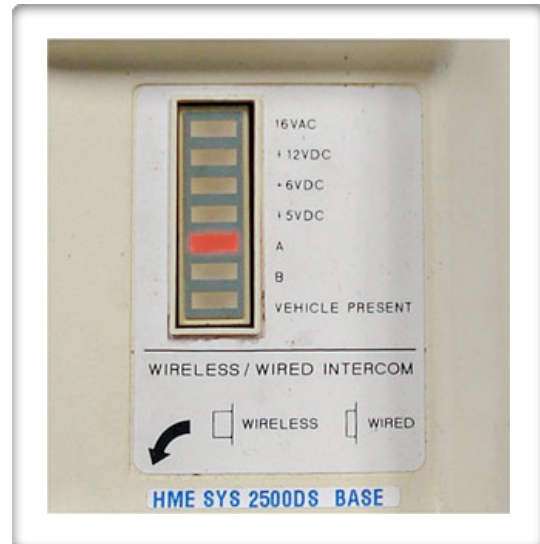

End of Procedure.

Final Notes

Call Us with any questions.

ESS, Inc.
615-259-3671
www.essnashville.com
help@drivethruhelp.com

© 2007 ESS, Inc. All Rights Reserved.